


# MODENA

## TRÄDGÅRDSBORD


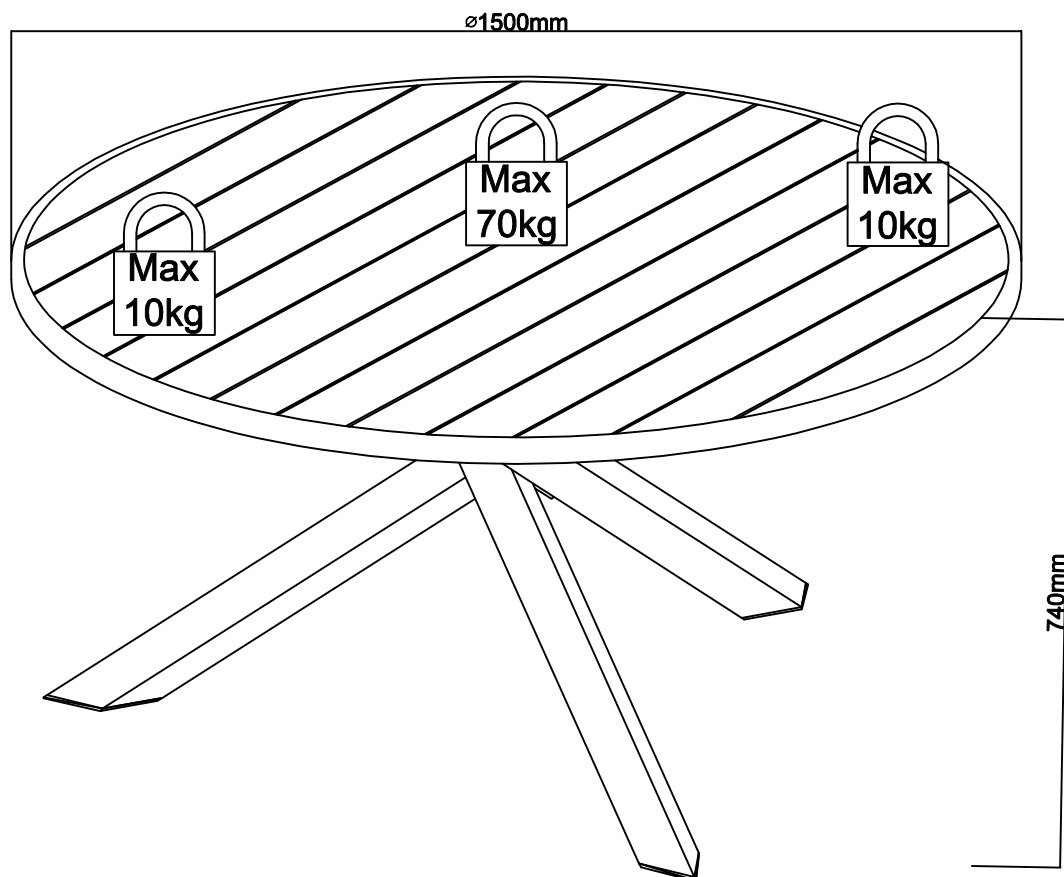


Först sätt i alla skruvarna i hålen, sedan dra åt dem.





M1780054

1-5

**mi**o

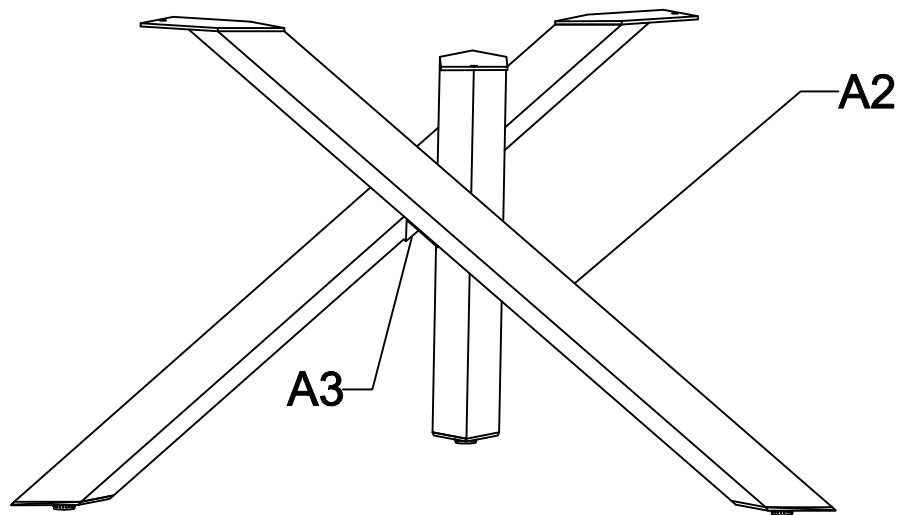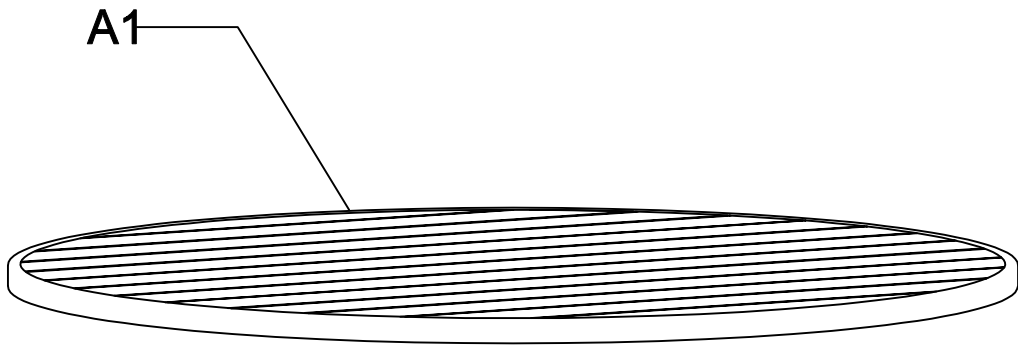

A1	1PC
A2	3PCS
A3	1PC

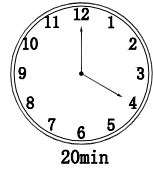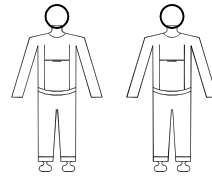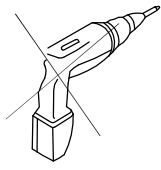


**M6x15mm**

**9\*B1**



**∅6x12mm**

**9\*B3**



**4mm**

**1\*B4**




M6x15mm

6\*B1




ø6x12mm

6\*B3




4mm


1\*B4

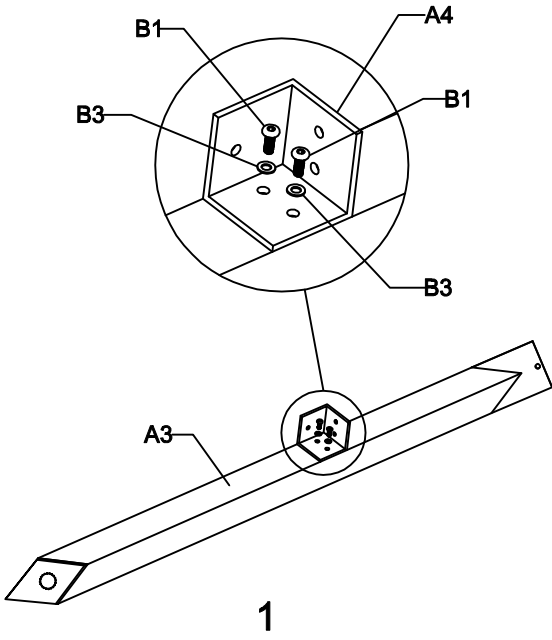

1

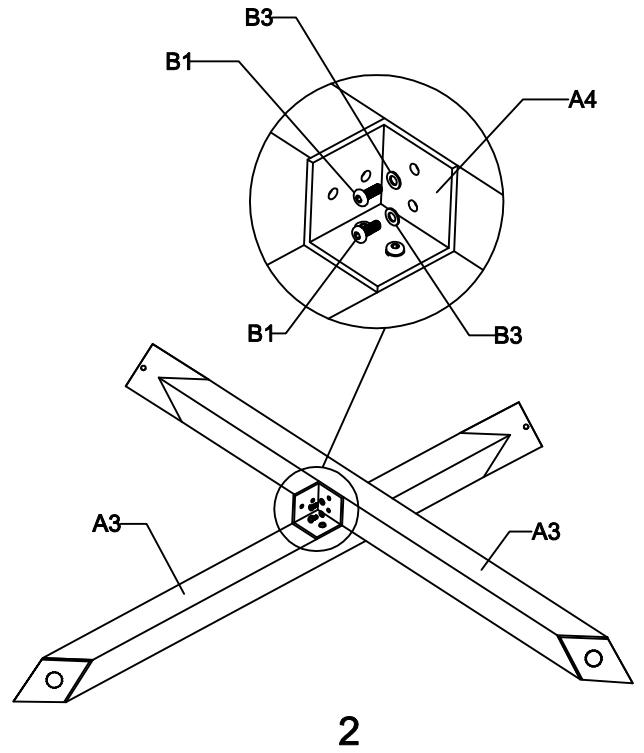

2

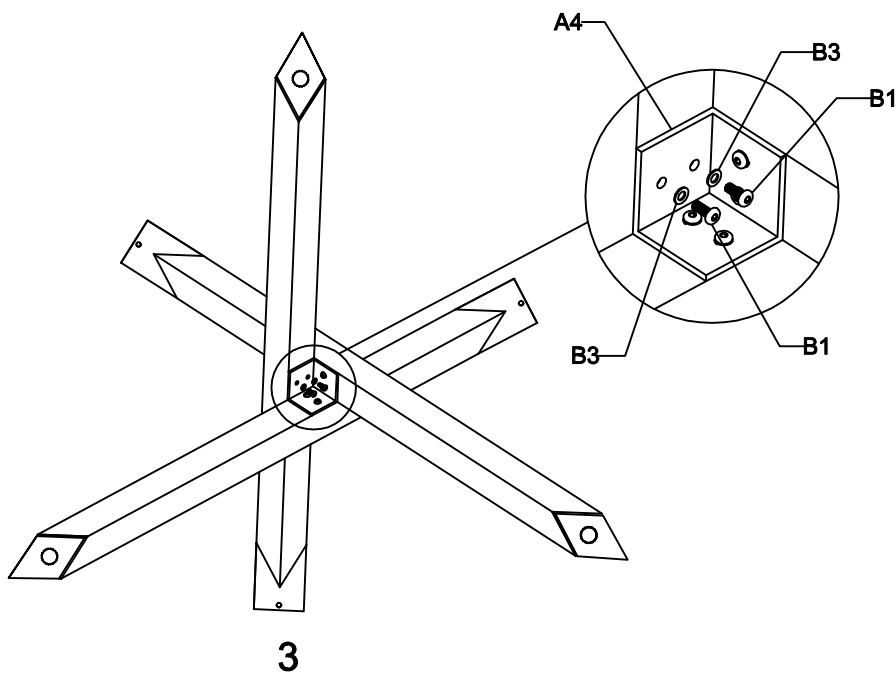

3

4-5




M6x15mm

3\*B1



ø6x12mm

3\*B3



4mm

1\*B4

