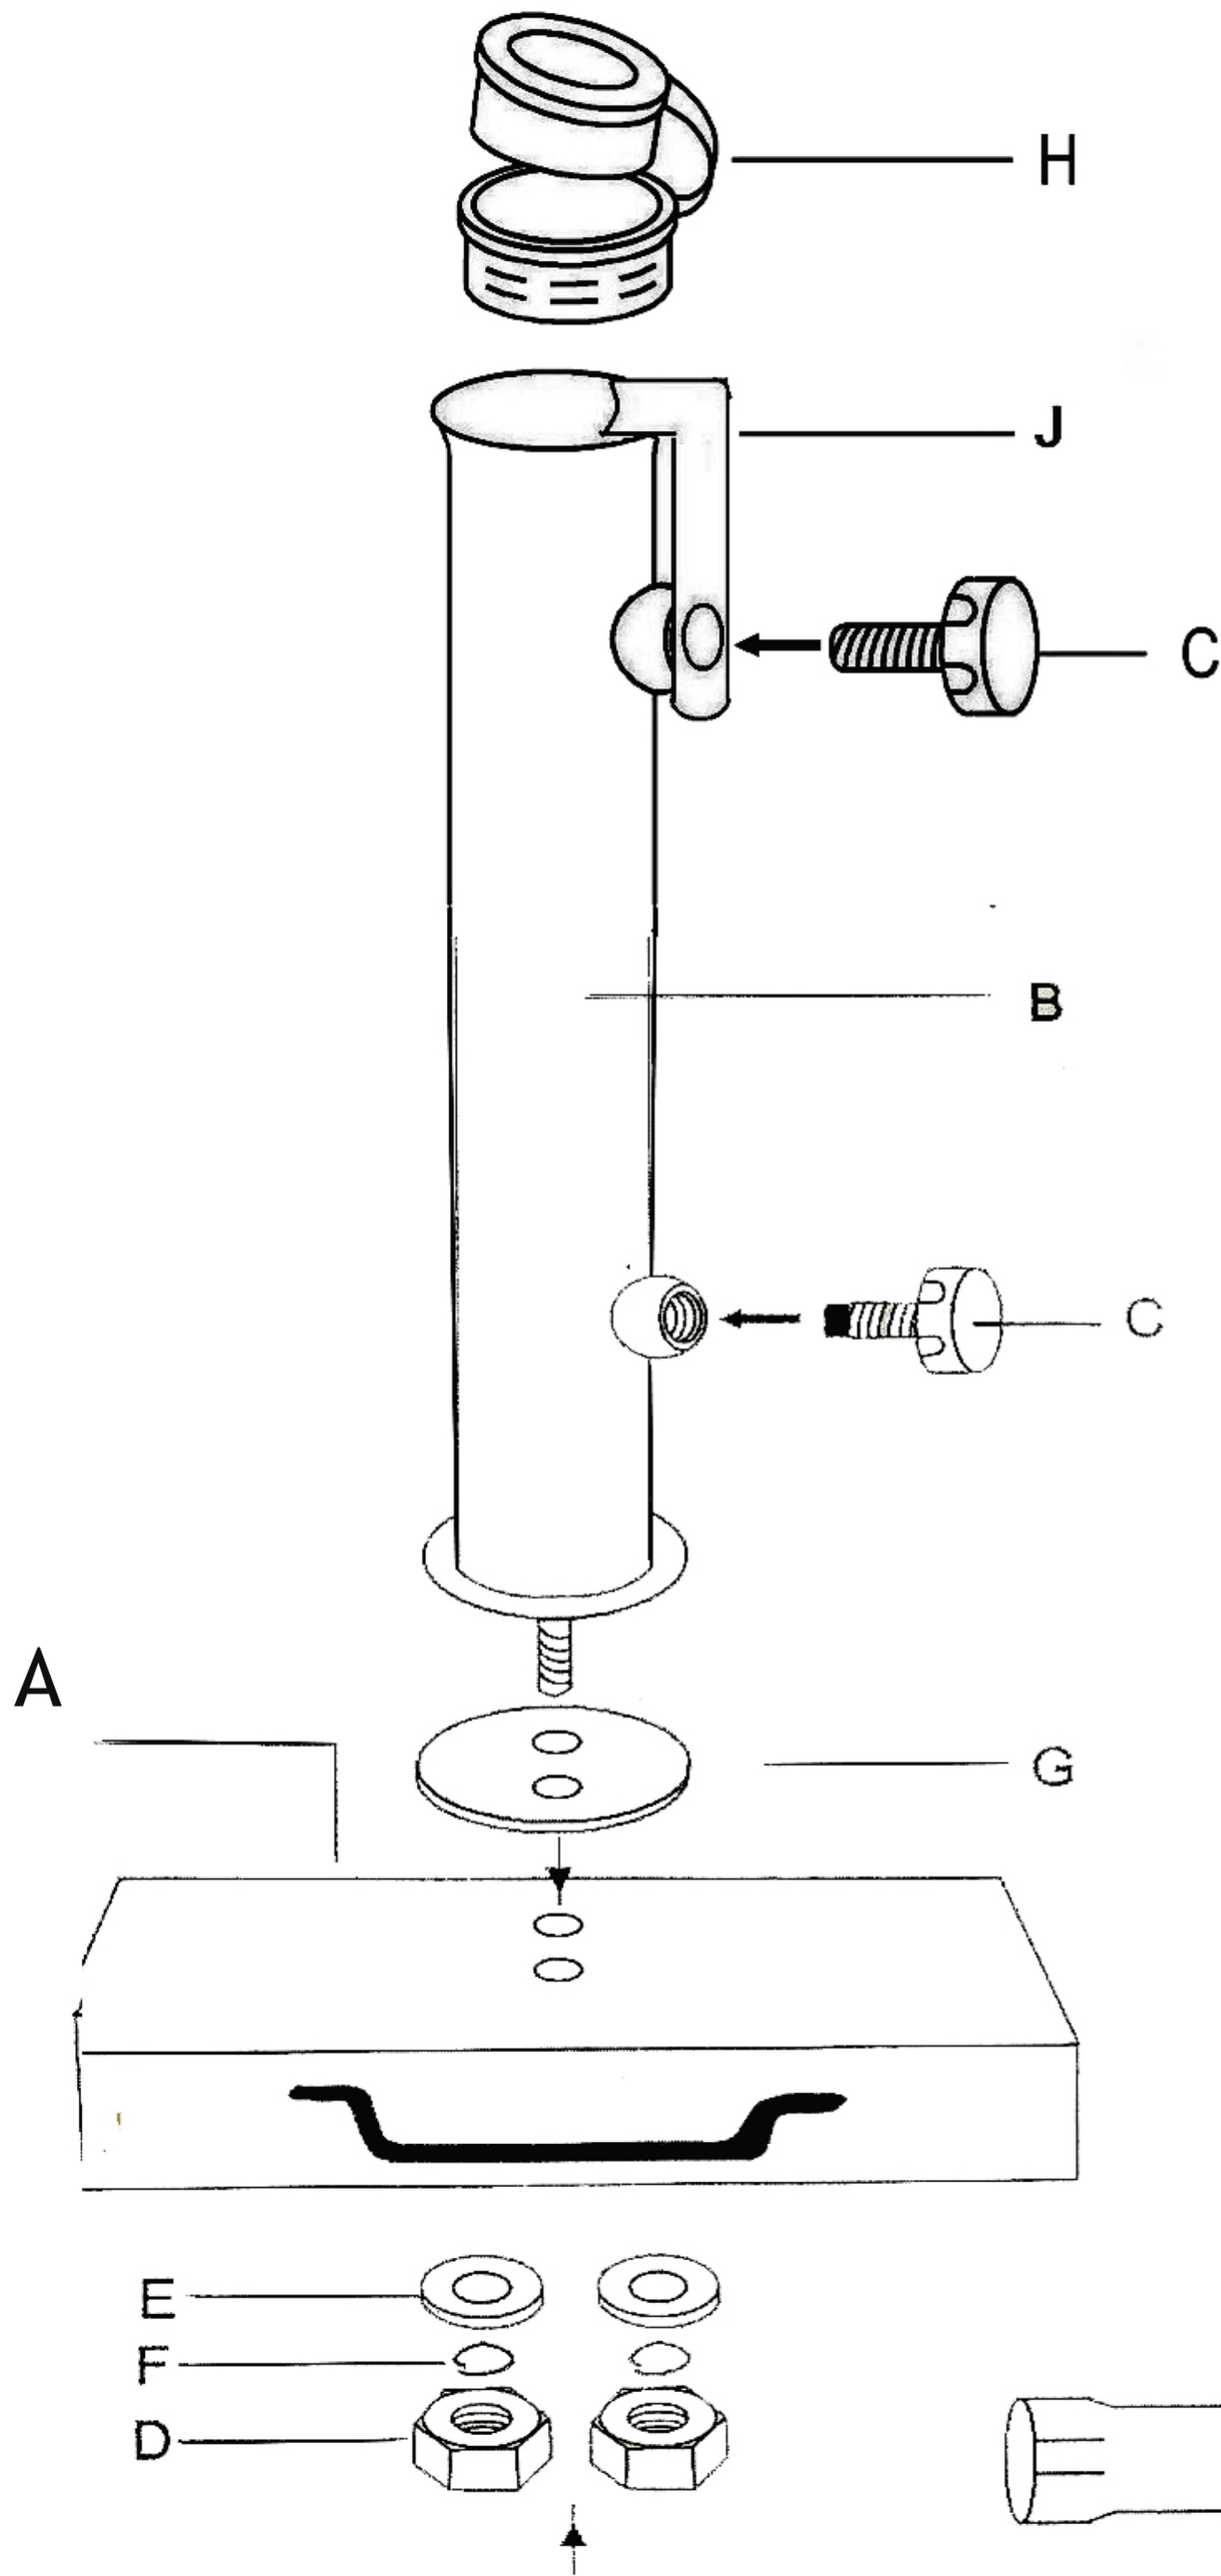
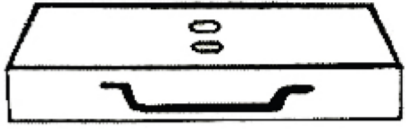











Assembly instuction

Square parasollfot



A	×1	
B	×1	 φ 60×300mm
C	×2	 φ 8mm ×35mm
D	×2	 φ 12mm
E	×2	 φ 12mm
F	×2	 φ 12mm
G	×1	 φ 85 × 2.5 mm
H	×1	 φ 60×30mm
I	×1	 φ 24×90mm
J	X1	 23 x 1.2