


# RIMINI SOLSÄNG

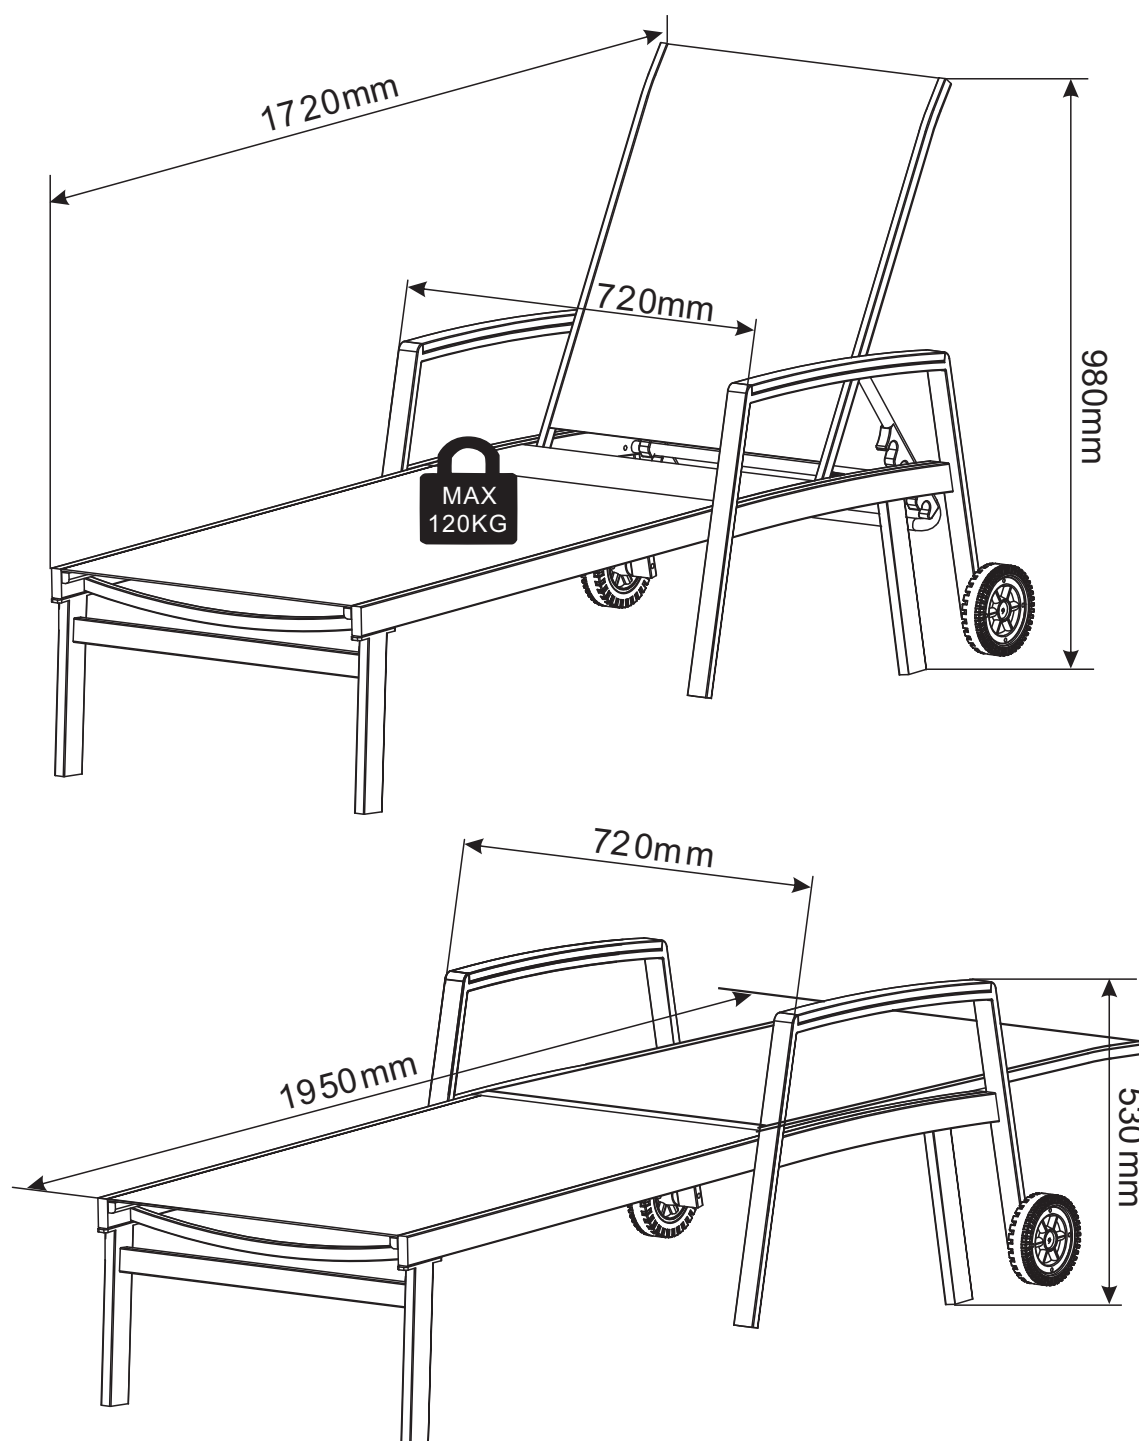


Först sätt i alla skruvarna i hålen, sedan dra åt dem




M1711376

1-6



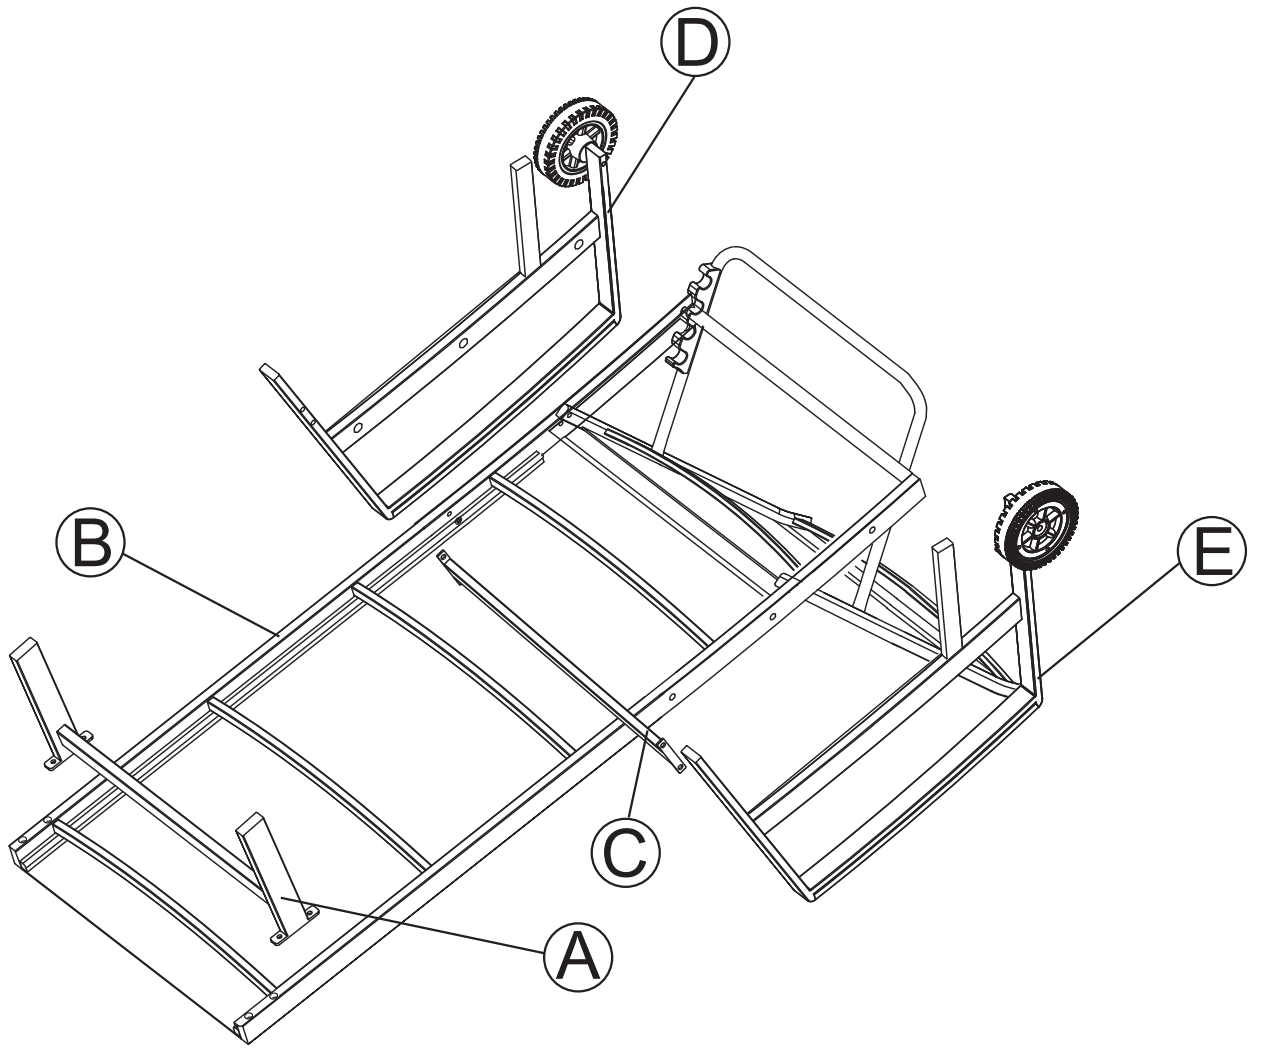

A	1PC	D	1PC
B	1PC	E	1PC
C	1PC		

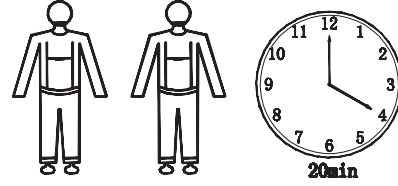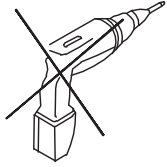

M6X20mm

8\*B1



M6X35mm

6\*B2






Ø 16X1.5mm


14\*B3






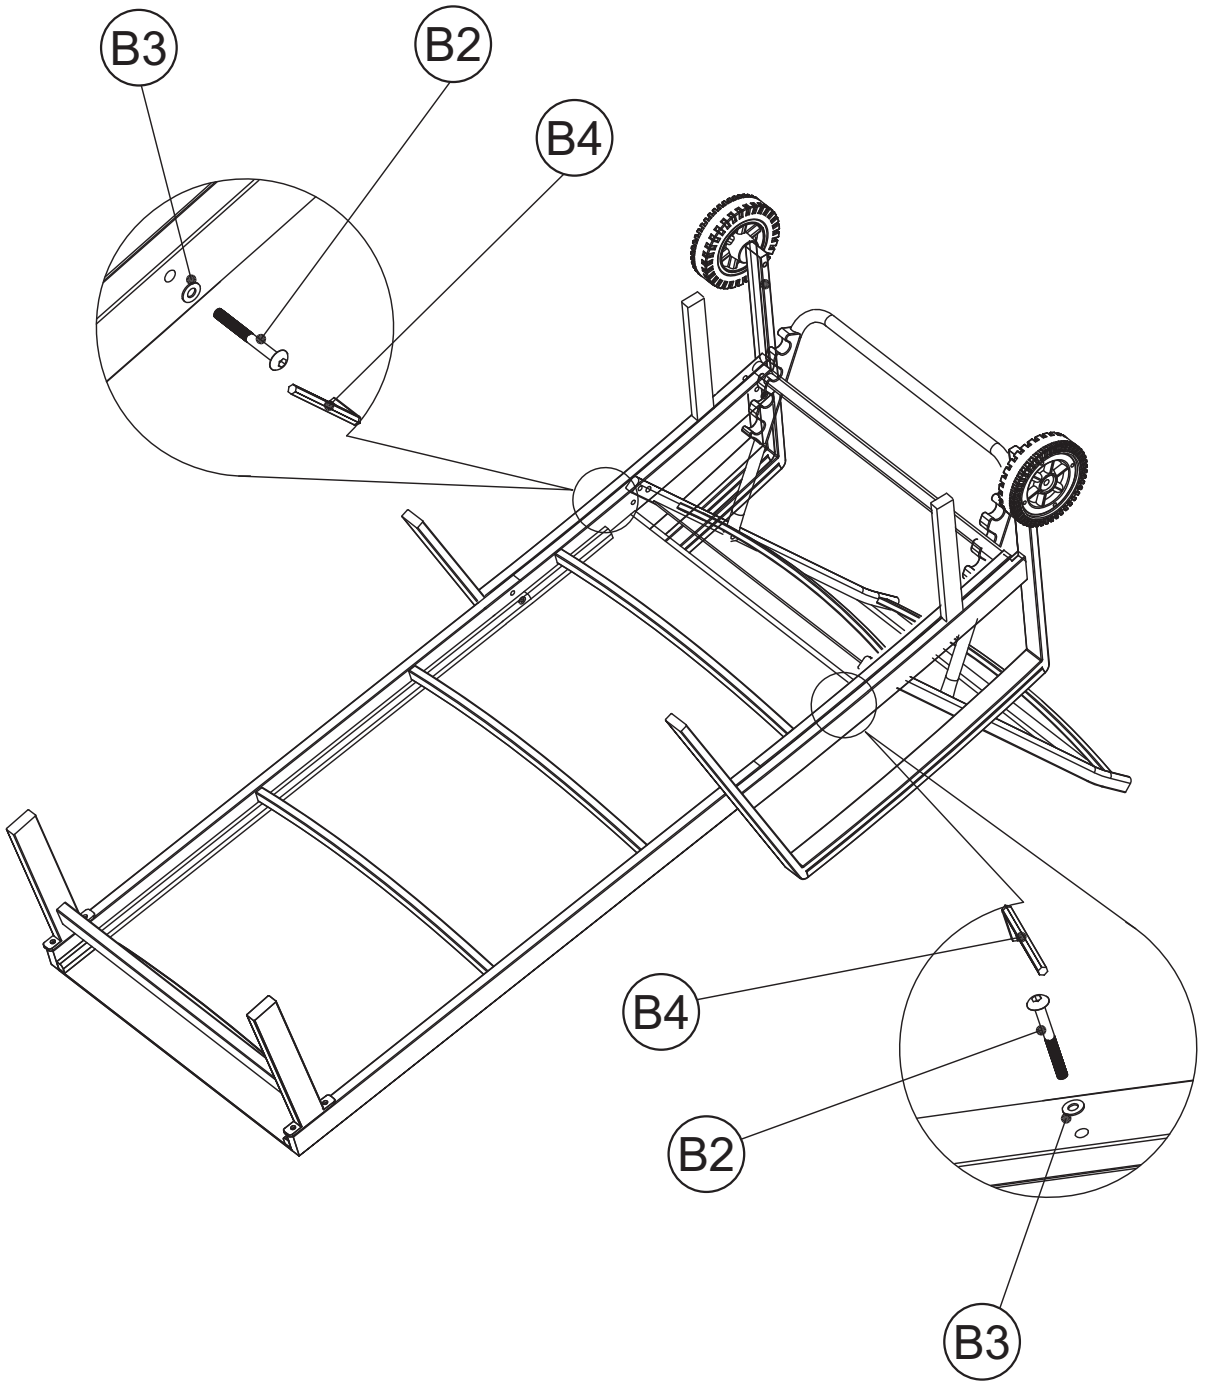
4mm

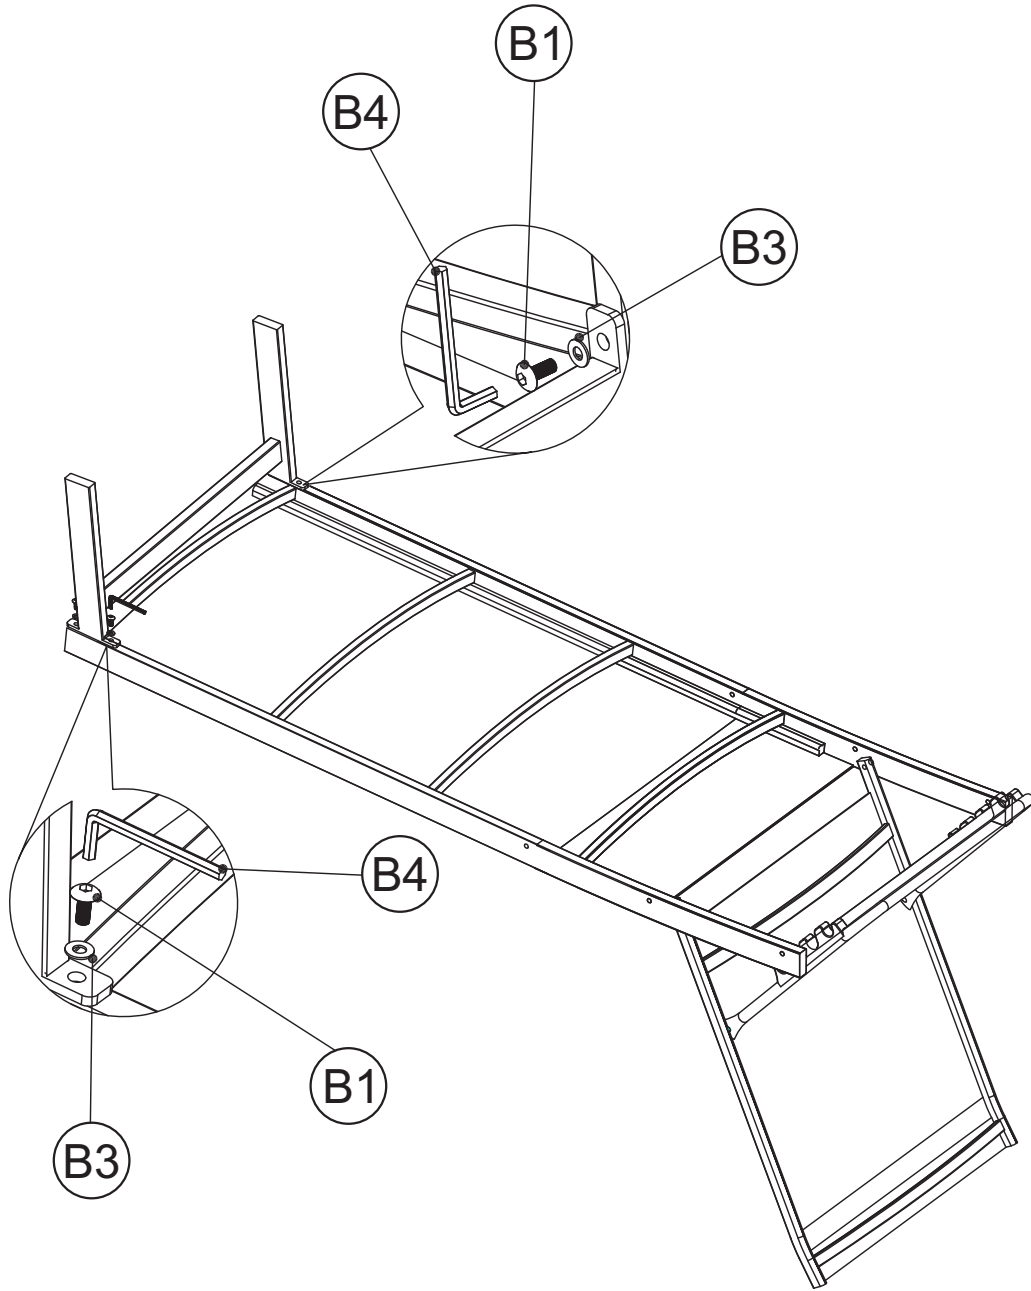


1\*B4

 <p>4mm</p>	 <p>M6X20mm</p>	 <p>Ø 16X1.5mm</p>
<p>1*B4</p>	<p>4*B1</p>	<p>4*B3</p>



 <p>4mm</p>	 <p>M6X35mm</p>	 <p>Ø 16X1.5mm</p>
<p>1*B4</p>	<p>6*B2</p>	<p>6*B3</p>



					
4mm	1*B4	M6X20mm	4*B1	Ø 16X1.5mm	4*B3

